OPERATING AND INSTRUCTION MANUAL

Upright Glass Door Merchandisers

This user manual was originally written in English. Please read the instructions carefully before using.



CB CE 🐽

Before installing your cooler, read these instructions carefully.

SAFETY PRECAUTIONS

- The purpose of the safety precautions in this manual is to ensue safe and correct use of the unit to minimize risks that could cause serious damage and injury to you or other persons. The safety precautions are divided into WARNINGS and CAUTIONS. Cases where improper handing of the unit could lead to death or serious injury are listed under the "AWARNING" heading. However, the cases listed under the "ACAUTION" heading could also lead to serious results. To ensure the safety, adhere strictly to both types of safety precautions.
- WARNING Improper handing of the unit could lead to death or serious injury.
- Δ CAUTION Improper handing of the unit could lead to serious results depending on the circumstanc
- Text set off by the exclamation mark contains information that should be strictly adhered to.
- After reading the instruction manual, store it an easily accessible place where the user(s) of this product can easily find it.

PRECAUTIONS FOR INSTALLATION


▲ WARNING

Installation should be performed only by the dealer or a qualified expert. Attempting to install the unit yourself could result in water leakage, refrigerant leakage, electrical shock, or fire.

PRECAUTIONS FOR INSTALLATION

AWARNING

SAFETY PRECAUTIONS

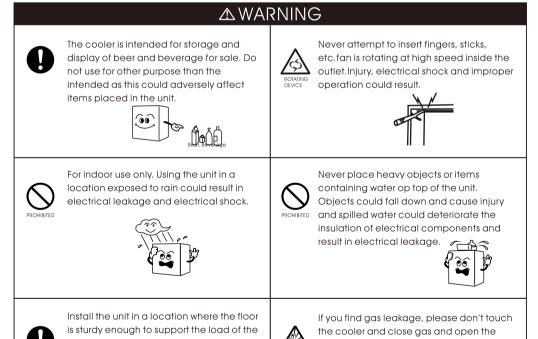



Installation should be performed only by the dealer or a qualified expert. Attempting to install the unit yourself could result in water leakage, refrigerant leakage, electrical shock, or fire.




Never put flammable or volatile substances into the unit as explosion and fire could result.



Use a dedicated wall outlet. Do not use extension cords or convenience receptacles as this could result in electrical shock, overheating and a fire



Never splash water directly onto the product or wash with water as short circuit and electrical leakage could result.

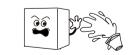


Do not damage, modify, excessively bend, strain, twist or bundle up the power cord. Also, placing heavy objects the power cord or squeezing it in a tight place could damage it, possible resulting in electrical shock or fire.

Never use flammable spray cans or leave flammable substances near the unit. Sparks from electrical switches could result in explosion and fire




1

unit. If the floor is not sturdy enough or installation is incorrectly performed, the unit could tip over and falling shelves and products could cause personal injury.

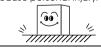

Store the unit in a location where it is not exposed to rain. Using a unit that has been exposed to rain could result in electrical leakage and electrical shock.



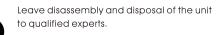



Y

door for ventilation. Gas leakage cause caution Against structure structure structure caution Against structure




Away from hot air sources. Cooling performance is reduced if the unit is placed near heat sources such as hot plates and stoves and if it is exposed to direct sunlight.



Should the unit need temporary storage, make sure not to store the unit in a location where children play and take precautions so that the door cannot be completely closed. This will minimize the risk that a child becomes trapped inside the compartment.

2

A WARNING

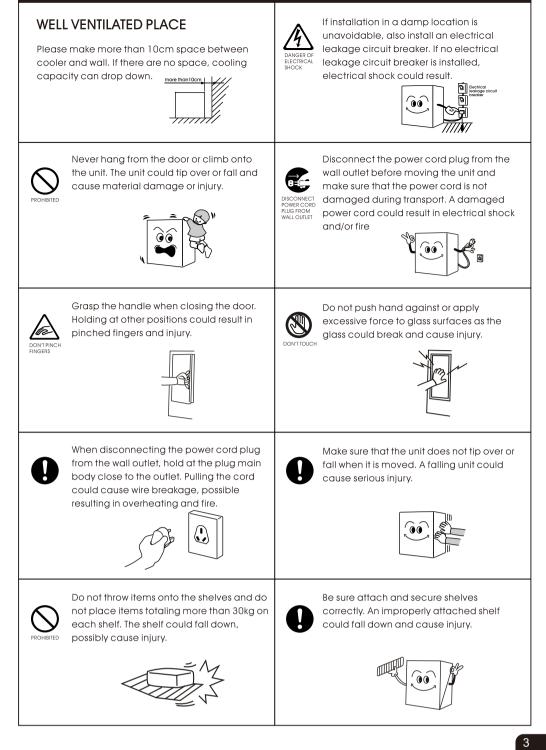

PLACING ITEMS IN THE SHOWCASE

This showcase employs a forced circulation of cold air system. If circulation of cold air is obstructed, the items will not be adequately refrigerated. Pay attention to the following points:

- Do not let items obstruct the cold air inlet and suction outlet.
- Place items so that they do not protrude from the shelves. The gap between the shelves and the door is used for circulation of cold air.
- Place items evenly on all shelves.
- Please do not display goods on the bottom. Please put goods on the shelf

CLEANING

A WARNING

To prevent any electrical shock hazards or injury by rotating circulation fan, always disconnect the power cord plug from the wall outlet before cleaning.

EXTERIOR AND COOLER COMPARTMENT

• Wipe with a soft, dry cloth. If very soiled, wipe with a cloth that has been moistened with a detergent. Then wipe with a cloth that has been dipped in water.

HOW TO USE

BEFORE USE

- Remove shipping package, tape, etc and leave doors open ventilation for a while.
- The unit is cleaned before shipment. However, clean the compartment interior once after delivery
- Please insert power supply plug into the wall outlet, single-phale to cat voltage.
- Allow the unit to operate for about 1 hour to cool the compartment before placing items in the cooler

WAIT 5 MINUTES OR MORE BEFORE RE-STARTING

• Restarting the unit immediately after it has been turned off may cause fuses to blow and activate the circuit-breaker, the compressor may be overloaded, and/or other damage may occur

TEMPERATURE ADJUSTMENT

• For glass door colder, the interior temperature will be kept at 0~10°C under +38°C ambient temperature. If the ambinet temperature is extremely high or the stuffing food inside is too much, that might cause the interior temperature a little bit higher. So, it would be better to adjust the digital controller by setting a lower temperature so as to maintain the right temperature. On the opposite, if the ambient temperature is very low or empty loaded, or in less food storage, the interior temperature. might be able to reach minus - 30°C, and in return to cause the evaporator ice up; Thus, it would be better to re-adjust the digital controller by setting a higher temperature.

DRAIN TRAY

- Defrosting is performed automatically and drain water is collected in the drain tray.
- Water is in the drain tray is evaporated automatically. In humidity, large amount of water in the drain tray, so please throw away drain water once a day.

EFFICIENT USE

- Please follow the below instruction, you could save energy.
- To prevent cold air from escaping, open and close the door quickly and keep the door opened for as short a time as possible.
- Please install the unit in the place which is well-ventilated.

SHELF HEIGTH ADJUSTMENT

The shelf height can be adjusted

Arrange the shelves in accordance with the dimensions of the items to be placed in the cooler

In case the unit shows operating problems, check the following prior to calling the authorized service company:		
SYMPTOMS	POSSIBLE CAUSE	SOLUTION
The unit is not operating	Faulty electrical contact	Verify electrical connections
	Poor electrical power	Check the power connection and electrical outlet
	Thermostat setting "0"	Change the thermostat setting to a higher number
Not reaching desired temperature	Unit is exposed to direct sun light	Relocate the unit to a shaded area
	Thermostat is not propertly adjusted	Adjust the thermostat setting to a higher number
	Clogger condenser	Review Maintenance instrutions listed in the manual
	Blocked grills	Clean the grills of any debris collected
	Door not properly closed	Check the leveling of the unit and door seal
	Products poorly distributed or excess product load	Redistribute the product load according Start instrutions
	For Models with electronic temperature controller,indicates E0 or E1	Unplug the unit from the outlet.If the error continues,contact an authorized service technician
Abnormal noises	The unit is not properly level	Level the unit following the Installation instruction
	Friction with other objects	Move the unit and avoid contact with other objects
Water on the floor	Drain hose is outside of the drain pan	Lovate the hose in the drain pan

WARRANTY & SERVICE

- Warranty is valid for one year from the date of purchase.
 The warranty covers defective parts and workmanchin Thefollowing its
- The warranty covers defective parts and workmanship. The following items are not covered under warranty:
- 1 Loss of product

AWARNING

WARNING: Do not splash water directly onto the cooler and do not wash with water. Short-circuit and electrical shock could result.

- Clean the cooler regularly to keep it clean at times.
- Never use polishing powder, soap powder, benzene,Oil or hot water as these will damage the painting and Plastic components



CHECKS

To ensure the safety, perform the following checks after cleaning

- Is the power cord plug firmly inserted into a dedicated wall outlet? Confirm that the plug is not abnormally hot.
- Check the power cord for cracks and damage. Should the slightest irregularity be observed, contact the dealer from whom you purchased this unit or our customer's service.

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

- n.eoss of products.
- 2.Damages caused by transportation.
- 3. Damages caused by modifications made by unauthorized individuals.
- 4.Fluorescent lights, glass parts or plastic component parts.
- 5.Worn out plugs or defective electrical components.
- 6.Maintenance of the unit.
- Warranty is valid showing the purchase receipt.
 We offer a professional service network which offers the necessary technical support for your unit.

-WARNING:Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction. -WARNING:Do not use mechanical devices or other means to accelerate the defrosting process,

other than those recommender by the manufacturer.

-WARNING:Do not damage the refrigerant circuit.

-WARNING:Do not use electrical appliances inside the food storage compartments of the

appliance, unless they are of the type recommended by the manufacturer.

-WARNING:This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

-WARNING: Children shall not play with the appliance.

-WARNING: Cleaning and user maintenance shall not be made by children without supervision.

-WARNING: If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

The following warnings only used for the product with refrigerant R290

-WARNING:Equipment is only allowed to transport and place in the normal way, during transportation, we need to ensure heat from sun radiation to equipment is not more than 60 °C , so as to protect refrigeration unit.

-WARNING: Equipment should be installed in a well-ventilated place, avoid larger thermal radiation. (Prohibit in front of a heater or heating equipment)

-WARNING:For any types of maintenance and well-keeping, need to stop power supply first, and professional personnel is required.

-WARNING:R290 discharge is only allowed to operate in well-ventilated room or outdoor, open flame is prohibit. -WARNING:LED light is not allowed to replace by oneself, but by professional maintenance personnel. -WARNING:Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance